

## Maestro series update F/W or boot code from Boot utility

### **Purpose:**

Update firmware/boot code from Boot Utility

### **Product Affect:**

Maestro 30R, Maestro 30S, Maestro 40R, Maestro 40S, Maestro 32R, Maestro 32S, Maestro 42R, Maestro 42S

### **Web Browser**

[Preparations](#)

[Procedure of upgrade firmware/boot code](#)

#### 1. Preparations

A. Download and unzip the latest firmware/boot code from web-site

<http://www.maxtronic.com/fw-download>.

B. RJ45 cross-cable (or through a hub/switch) to connect LAN ports between RAID and computer


#### 2. Procedure of upgrade firmware/boot code

A. Input RAID GUI IP address in the Web Browser


B. Login GUI management screen by user name and password (Default user name: admin, Password: 0000)

C. Click System → Firmware Update

D. Select Boot code or system F/W item, and then click Browse to open boot code or firmware file

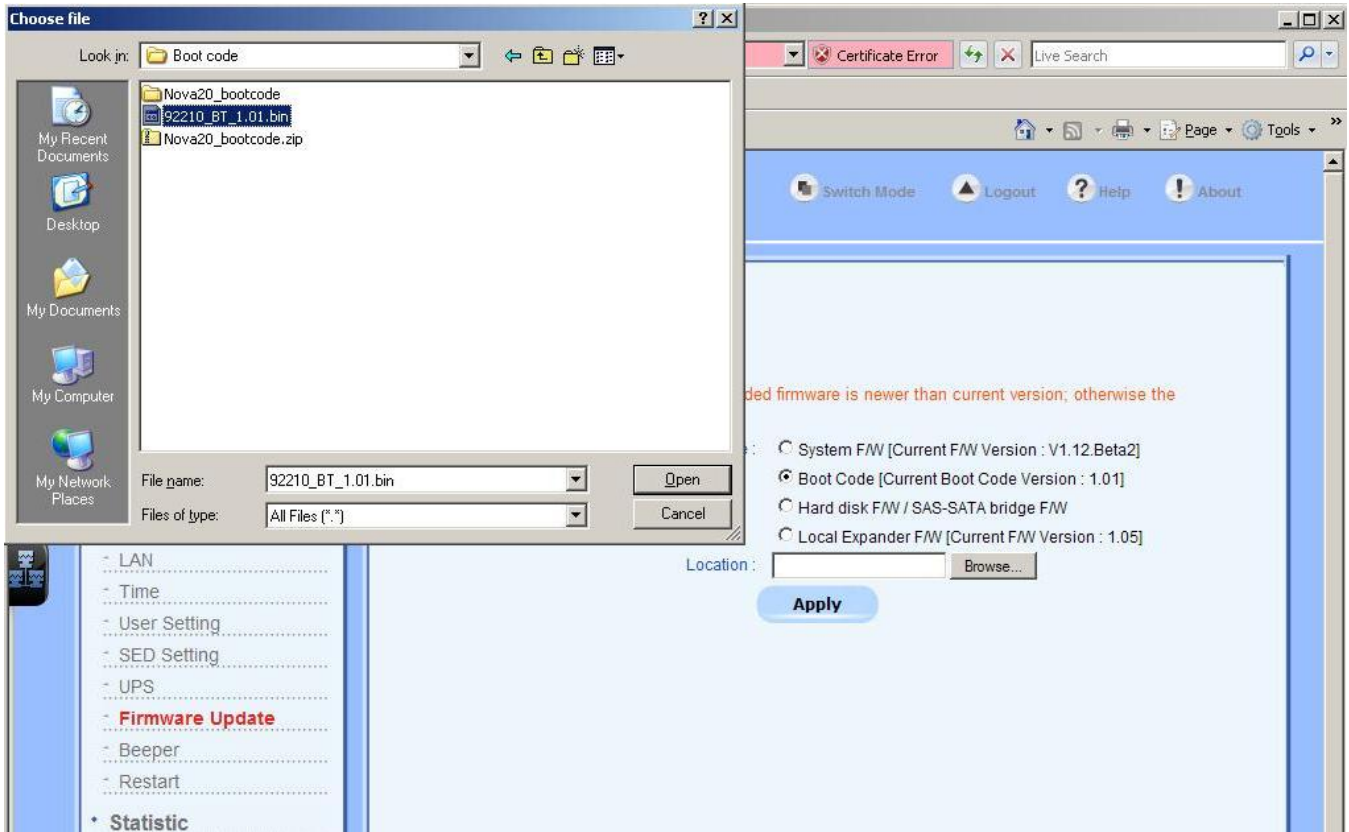

E. When upgrade process 100%, click OK button.

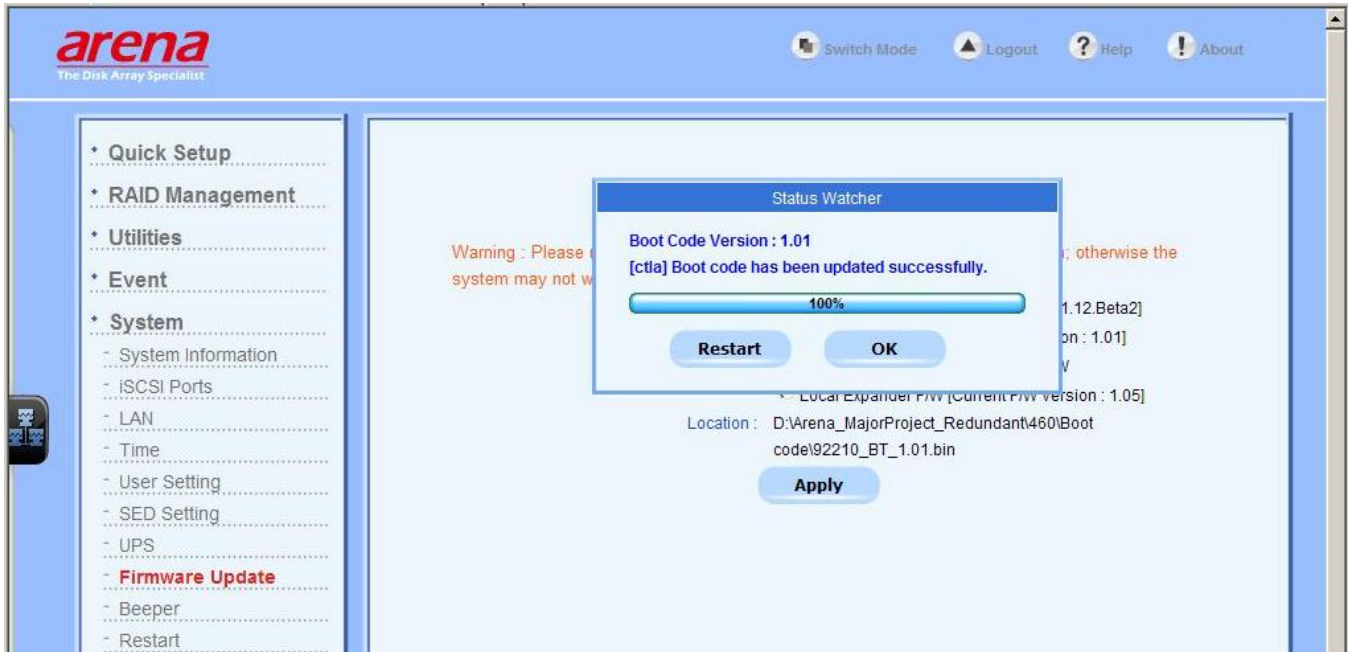

F. Click System→Restart→select single or both controllers to reboot RAID

